MTP U R RS and MTP U R RS SEQ Connection and Operation

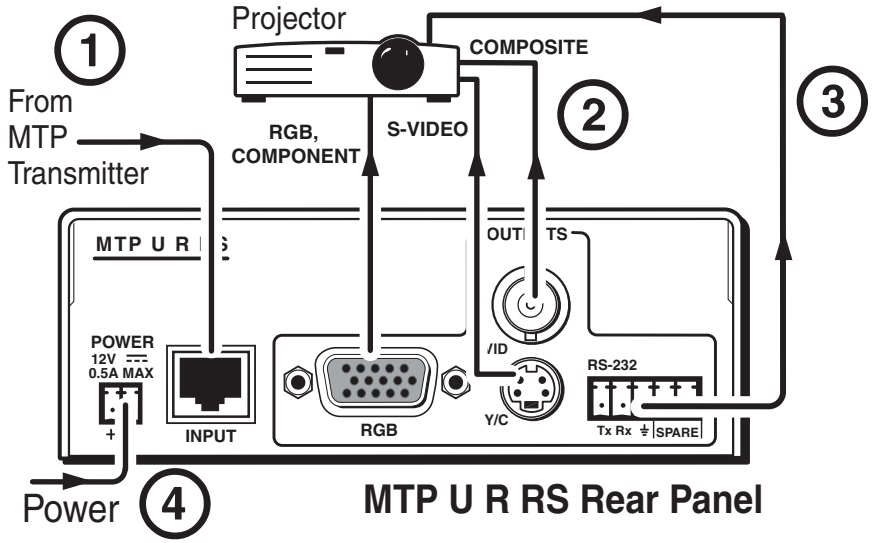

MTP U R RS Rear Panel

NOTE *MTP U R RS and MTP U R RS SEQ have identical rear panels.*

Rear Panel Conections

1. Connect the TP cable from an MTP transmitter to the RJ-45 input connector.
2. Connect a display device to any of the video output connectors as follows:
   - 15-pin HD for RGB or component video
   - 4-pin mini DIN for S-video
   - BNC for composite video
3. Connect a display device to the 5-pin captive screw connector for RS-232 control.
4. Connect the power supply.

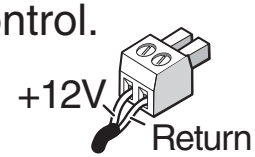

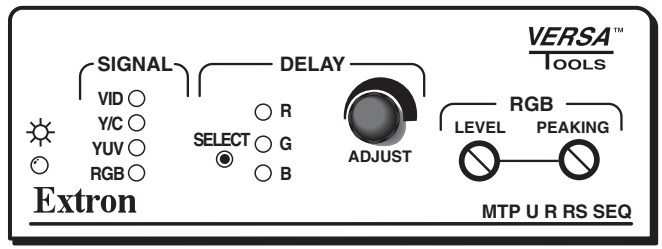

MTP U R RS SEQ Front Panel

NOTE *MTP U R RS front panel does not have the skew equalization features.*

Front Panel Operation

Power LED — Lights green when power is present.

Signal LEDs — The MTP U R A auto detects the input signal type (video, Y/C, YUV or RGB) carried on the RJ-45 from the transmitter. The corresponding LED lights green to indicate the signal type present.

Skew Equalization (SEQ model only) — To compensate for skew (signal delay) caused by different cable lengths, press the recessed button to select the red, green, or blue signal. The corresponding LED lights. Adjust the knob until the signal is equalized. Repeat as needed.

Level, Peaking — Adjust the **Level** knob for brightness and the **Peaking** knob for sharpness.

Extron Electronics www.extron.com
USA 800.633.9876 **Europe** +800.3987.6673
Asia +800.7339.8766 **Japan** +81.3.3511.7655

N15779 LISTED 1T23 I.T.E.
33-1498-01
Rev. A
11 07